


## Product information

# S7-Panel-HMI

## HMI1560T

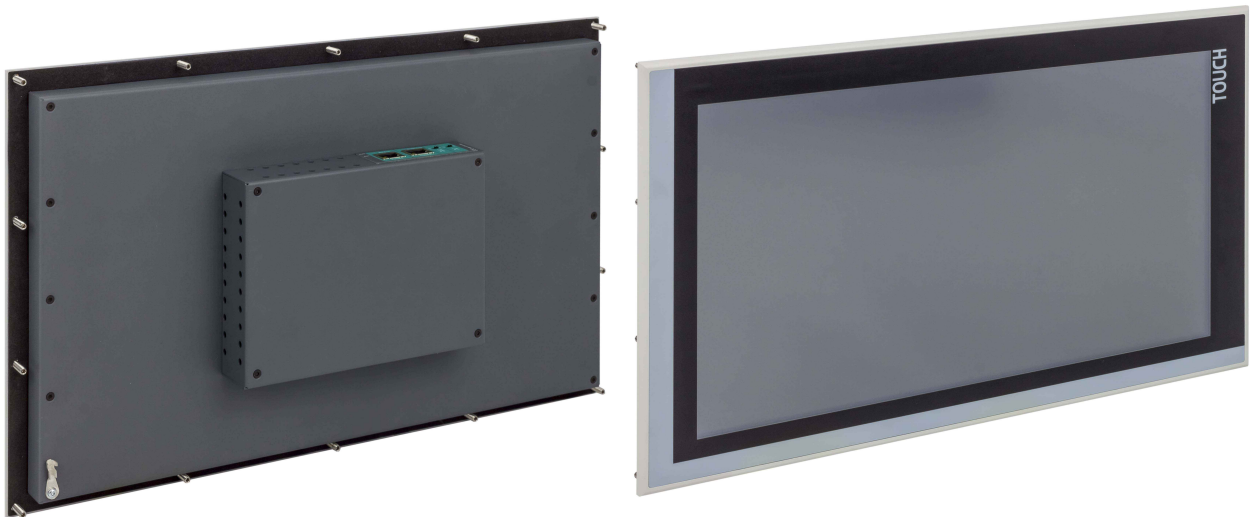

(valid from HMI-version HMI1560T-xxx-02)

### Changes to older versions of this document

none

## Description

### S7-Panel-HMI with

- 15,6" TFT display (1366x768 pixel)
- resistive touch (front protection class IP65)

### Standard configuration:

#### Ethernet with

- RFC1006 (S7-communication),
- Send/ Receive via TCP and UDP,
- Modbus TCP

#### State LEDs for

Power, Battery, Error, Run

#### Inserting stripes

- for Logo and identification (thereby customized adaption possible easy)

### Scope of delivery:

- Mounting kit with grounding terminal
- Technical data sheet



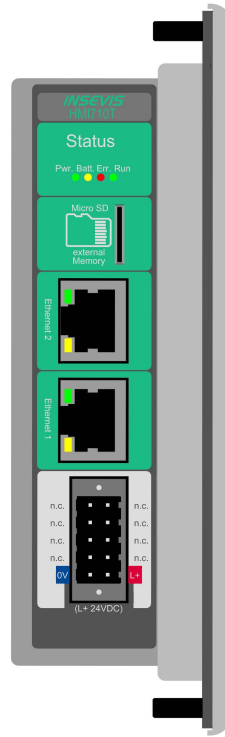


Figure above: View to rear side and connections sides of HMI1560T (horizontal use)

Figure below: CPU-connections of all Panel-HMI with CPUs type T

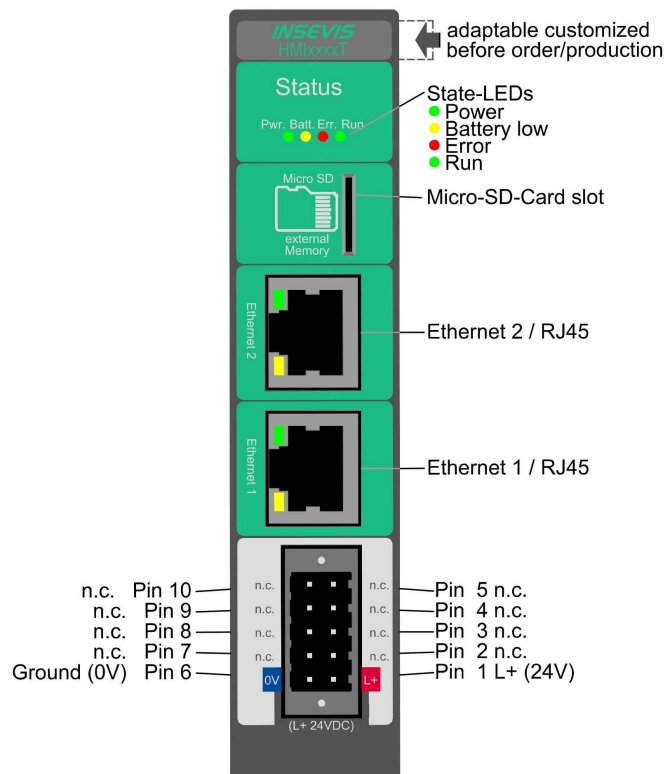

Technical data	
Dimensions W x H x D (mm) Cut out W x H (mm) Weight	410 x 250 x 54 387 x 228 ca. 1.900 g
Operating temperature range Storage temperature range	-20°C ... +60°C (without condensation) -30°C ... +80°C
IP-protection class front panel rear side	IP65 IP41
Connection technology	removable connector with 2 lift arms or 2 bolt flanges (cage clamp technology) for cross section up to max. 1,5mm <sup>2</sup>
Load voltage L+	24V DC (11 V ... 30V DC)
Current consumption Power dissipation	500mA 12W (typ.)
Start-up current	< 3A
Diagonal of display (inch) Display resolution (pixel)	15,6" (258mm) 1366x768 Pixel (16:9)
Display unit Operating unit	TFT display with 16Bit colours analog resistive touch screen
Visualization tool unit to reference there	VisuStage HMI1560T
Technical data	
CPU	
CPU-type	<b>CPU-T (HMI1560T)</b>
Flash internal - for visualization external memory	48 MByte Micro SD, up to max. 8 GByte (only for archiving)
Ethernet (protocols)	2x Ethernet: (switch or separated ports): 10/100 MBit with parts of CP343 functionality (RFC1006, TCP, UDP, Modbus-TCP)

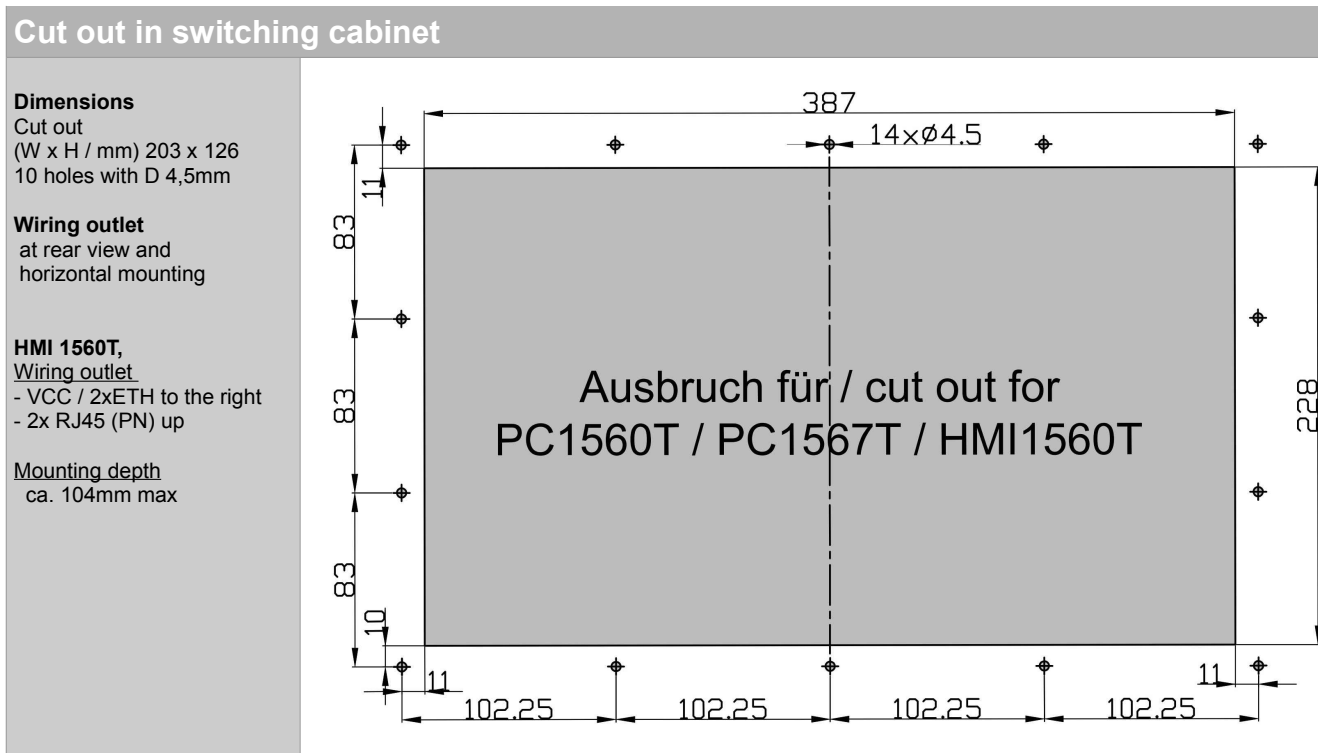

## Documentation and samples



Internet: <http://www.insevis.com/>  
 Box: Downloads / Quicklinks  
 Download: TI-HMI xxxx.pdf  
 Box: Downloads / Quicklinks  
 Download: Manual Panel-HMI.pdf



Internet: <http://www.insevis.com/>  
 Box: Downloads / Quicklinks  
 Download: Demo-visualization  
 INSEVIS provides sample programs lots of functions, well documented for free download.

## Ordering data of devices

Identification	Standard
S7-Panel-HMI HMI1560T	HMI1560T-02

## Ordering data of accessoires

Identification / Order-No.	Identification / Order-No.
Connector 2x5pin (lift arms) / E-CON10-00	Connector 2x5pin (bolt flanges) / E-CONS10-00
Mounting set for 15,6" devices* / E-MNT156-00 (VPE10)	Inserting stripe H for logo and identification for rear side* / E-LABH-00
Micro SD-card 1GB (external memory) / E-MSD1-00	Micro SD-card 4GB (external memory) / E-MSD4-00
Micro SD-card 2GB (external memory) / E-MSD2-00	Micro SD-card 8GB (external memory) / E-MSD8-00

\* (1x already part of first deliveries scope)

### Qualified personnel

All devices described in this manual may only be used, built up and operated together with this documentation. Installation, initiation and operation of these devices might only be done by instructed personnel with certified skills, who can prove their ability to install and initiate electrical and mechanical devices, systems and current circuits in a generally accepted and admitted standard.

### Copyright

This and all other documentation and software, supplied or hosted on INSEVIS web sites to download are copyrighted. Any duplicating of these data in any way without express approval by INSEVIS GmbH is not permitted. All property and copy rights of these documentation and software and every copy of it are reserved to INSEVIS GmbH.

### Trade Marks

INSEVIS refers that all trade marks of particular companies used in own documentation are reserved trade marks are property of the particular owners and are subjected to common protection of trade marks.

### Disclaimer

All technical details in this documentation were created by INSEVIS with highest diligence. Anyhow mistakes could not be excluded, so no responsibility is taken by INSEVIS for the complete correctness of this information. This documentation will reviewed regularly and necessary corrections will be done in next version. With publication of this data all other versions are no longer valid.