

Product information

Touchpanel

HMI570V

HMI570P



(valid from HMI-version HMI570x-**03**)

Changes to older versions of this document

Rev. 02 → **03**: PC580P removed

Rev. 03 → **04**: new front foil, new images, new design line, connectors added

Description

Panel with TFT-color touch display

- HMI570V/P
5,7" TFT (320x240 pixel)

Standard configuration:

- Ethernet with
- RFC1006,
- Micro-SD-slot
- for SD-cards up to 8 GByte
- Status LEDs for
Power, Battery, Error, Run
- Inserting stripes for Logo and identification
(thereby customized adaption possible easy)

Scope of delivery:

- mounting set
- technical information
- brief instruction

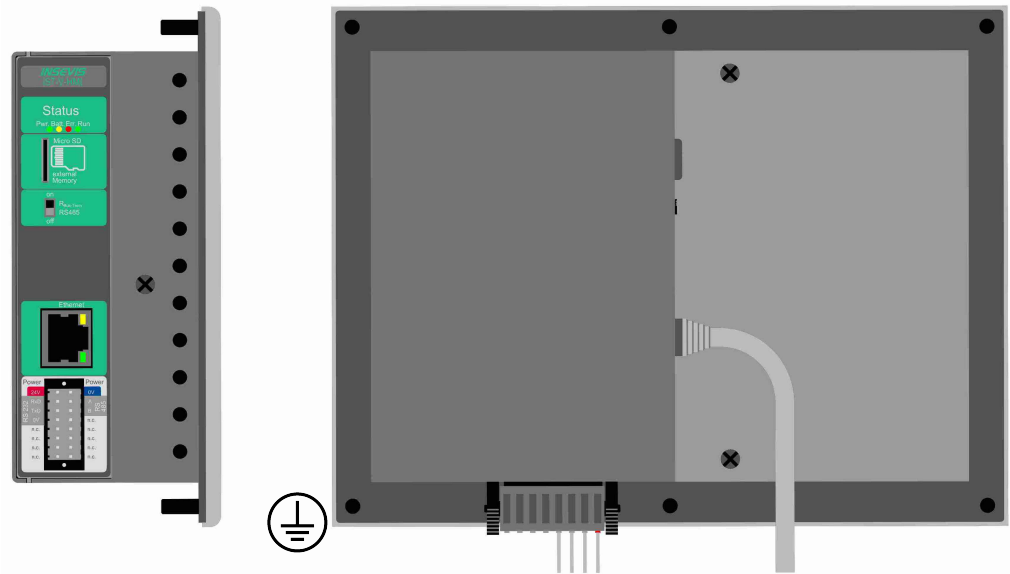


Figure above: Panel HMI570V device rear view and view from the side

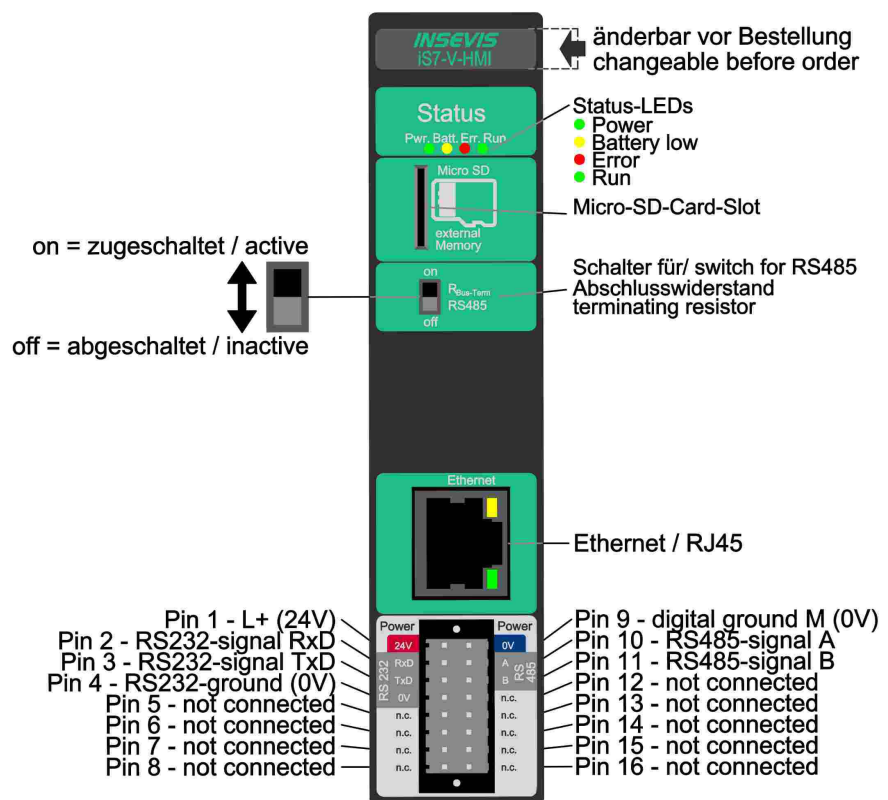


Figure above: Description of connections of all Panels with CPU-types V and P

Technical data	
Dimensions W x H x D (mm)	182 x 140 x 49
Cut out W x H (mm)	163 x 118
Weight	ca. 600 g
Operating temperature range	-20°C ... +60°C (without condensation)
Storage temperature range	-30°C ... +80°C
IP-protection class front panel	IP65
rear side	IP41
Connection technology	connector with pin-marked pushers and 2 lift-arms or 2x bolt flanges on side (cage clamp technology) for cross sections up to max. 1,5mm ²
Load voltage L+	24V DC (11 V ... 30V DC)
Current consumption	50 mA ... 650 mA
Power dissipation	2 W (typ.), 10 W (max.)
Start-up current	< 3A
Diagonal of display (inch)	5,7" (145mm)
Display resolution (pixel)	HMI570V/P: 320x240 Pixel (QVGA)
Display unit	TFT display with 16Bit colors
Operating unit	analog resistive touch screen
Visualization software	VisuStage
Reference unit	HMI570V/P

Technical data	CPUs	
CPU-type	Type V (HMI570V)	Type P (HMI570P)
Flash internal - for visualization external memory	4 MByte Micro SD, up to max. 8 GByte	24 MByte Micro SD, up to max. 8 GByte
Real-time clock	yes (accumulator-backed hardware clock)	
Serial interfaces (protocols)	COM2: RS 485 (only physical - protocols on demand)	
Ethernet (protocols)	ETHERNET: 10/100 Mbit (RFC1006)	

Control panel cut out

Dimensions

Cut out
W x H (mm) 163 x 118
6 holes with D 4,5mm

Mounting depth
ca. 49mm max.

Wiring outlet
- RJ45: in the center to the right
- connector 2x16 to the bottom
(rear view and horizontal mounting)

- RJ45: in the center down
- connector 2x16 to the left
(rear view and vertical mounting)

The drawing shows a rectangular cut out with a width of 163 mm and a height of 118 mm. There are six circular holes, each with a diameter of 4.5 mm, arranged in two rows of three. The top and bottom margins are 5.5 mm. The center-to-center distance between the holes in each row is 85.5 mm. The distance between the center of a hole in the top row and the center of a hole in the bottom row is also 85.5 mm. The distance from the center of a hole to the nearest side edge is 4 mm.

Drill jig

An 1:1 pattern as drill jig is available as PDF at INSEVIS web site for this product
Print it 1:1 and use it for marking the cut out.

Ordering data devices

Identification	Order-no.	Packaging unit
Touchpanel HMI570V	HMI570V-02	PU: 1 piece
Touchpanel HMI570P	HMI570P-02	PU: 1 piece

Ordering data accessoires

Identification / Order-No.	Identification / Order-No.
Connector 2x8pin / E-CON(S)16-00	Mounting / grounding set for 5,7"-devices * / E-MNT57-00 (PU10)
Micro SD-card 1GB (external memory) / E-MSD1-00	Micro SD-card 4GB (external memory) / E-MSD4-00
Micro SD-card 2GB (external memory) / E-MSD2-00	Micro SD-card 8GB (external memory) / E-MSD8-00
OEM-Firmware with customized logo included / SW-BS-OEM	Inserting stripe H for logo + identification for rear side (PU100 pcs.)

* (1x already part of first deliveries scope)

Qualified personnel

All devices described in this manual may only be used, built up and operated together with this documentation. Installation, initiation and operation of these devices might only be done by instructed personnel with certified skills, who can prove their ability to install and initiate electrical and mechanical devices, systems and current circuits in a generally accepted and admitted standard.

Manuals, sample programs

Additional documentation by manuals is available as well sample applications at the download area of www.insevis.com in English language for free download.

Copyright

This and all other documentation and software, supplied or hosted on INSEVIS web sites to download are copyrighted. Any duplicating of these data in any way without express approval by INSEVIS GmbH is not permitted. All property and copy rights of these documentation and software and every copy of it are reserved to INSEVIS GmbH.

Trade Marks

INSEVIS refers that all trade marks of particular companies used in own documentation are reserved trade marks are property of the particular owners and are subjected to common protection of trade marks.

Disclaimer

All technical details in this documentation were created by INSEVIS with highest diligence. Anyhow mistakes could not be excluded, so no responsibility is taken by INSEVIS for the complete correctness of this information. This documentation will reviewed regularly and necessary corrections will be done in next version. With publication of this data all other versions are no longer valid.

With publication of this information all other versions are no longer valid.